



# TV User Guide



Connecting at the Speed of Life

[support.scrtc.com](http://support.scrtc.com)

# TABLE OF CONTENTS



Welcome. Version as of May 2011

This instructional TV Guide is provided by South Central Rural Telephone Cooperative, Inc. and South Central Telcom, LLC as a helpful tool to assist our TV subscribers in navigating throughout their on-screen TV Guide, and the operation of their Set Top Box (STB) and Remote Control.

---

Remote Control .....	2
Electronic Program Guide .....	3 - 4
Enable Caller ID .....	5
Caller ID Log.....	6
Set Caller ID Timeout .....	6 - 7
Digital Video Recorder (DVR).....	8 - 12
Pause Live TV (PLT) .....	13
Schedule Event from Program Guide.....	13 - 14
Scheduled Events.....	14 - 15
Pay Per View (PPV) .....	15 - 16
Create & Edit Favorites .....	17 - 18
Search Feature.....	19 - 20
Closed Captioning .....	20 - 21
Parental Control (Enable & Edit) .....	22 - 25
Channel Blocking.....	26 - 27
Themes.....	27 - 28
Programming Remote .....	28 - 32
Troubleshooting.....	32 - 33

---

## **Contact Information: Technical Assistance Center**

Web	support.scrtc.com
Email	helpdesk@scrtc.com
Phone	678-2615 / 528-2615 / 407-5615
SCTV	Channel 100 (Instructional Channel)

**Hours:**


Monday - Friday	7 a.m. - 9 p.m.
Saturday	8 a.m. - 9 p.m.
Sunday	1 p.m. - 9 p.m.

# REMOTE CONTROL

## Entone Remote Control URC Plus

### Part Name Description

1. Setup	Used for remote control programming
2. Input	Changes the A/V input of selected device
3. <b>Power*</b>	Turns selected device on/off
4. <b>STB*</b>	Puts remote in STB (set top box) mode
5. TV	Puts remote in TV mode
6. Lang	not used
7. <b>Guide*</b>	Displays program guide
8. <b>Volume*</b>	Raises or lowers volume of selected device
9. <b>Last*</b>	Changes to most recently viewed channel
10. Pause	Pauses DVR playback/Pause Live TV Feature
11. Page For/Rev	Advances guide forward/reverse twelve hours
12. Fast Rev/For	Starts fast reverse and fast forward for DVR
13. Red	not used
14. Green	not used
15. Numbers Keys	Allows direct access to specific channels
16. Enter	not used
17. DTV	not used
18. Movies	not used
19. Record-It	Access to DVR menu
20. Promos	not used
21. Aux	Used to control auxiliary device
22. Info	Displays information about current program being watched
23. Menu	Displays the on-screen menu
24. Exit	Exits the current menu item
25. <b>Ch up/down*</b>	Changes the channels up or down
26. <b>Record*</b>	Starts recording of the program being viewed
27. Stop	Stop button for DVR/Reset PLT
28. Direc. Arrow	Navigates right, left, up or down in the on-screen guide
29. OK	Executes currently selected menu option
30. Play	Play button for DVR
31. Blue	not used
32. Yellow	not used
33. Mute	Turns the volume off
34. Media	not used
35. Music	not used
36. Help	not used
37. Phone	Access to caller ID log

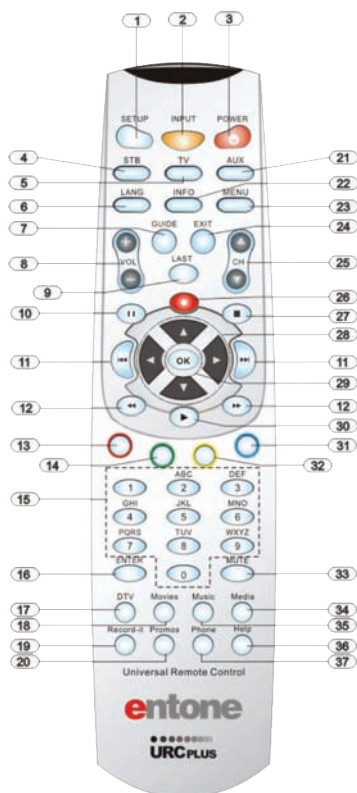

\*Frequently Used Remote Control Functions

Press the **Guide** button on the Entone remote, and the program guide will display as seen below. The last channel viewed will be displayed at the top right of the screen with information about the program on the left. The program listings are displayed at the bottom of the screen. There are multiple preset guides such as **All** and **Subscribed**. Pressing and releasing **Guide** on the remote will toggle through the various guides.

## Step 1

**All:** Displays all channels offered by SCRTC

**Subscribed:** Displays only the channels subscribed to

**PPV:** Displays the six PPV channels available

**Favorites:** Selection of channels programmed as favorites

**HD:** Displays all High-Definition (HD) channels




To scroll through the program listings press the **Up**, **Down**, **Right** or **Left Arrow** buttons on the Entone remote. Information about the highlighted program will be displayed at the top left of screen. If the highlighted program is in progress pressing the **OK** button once will display that program on the top right of the screen, pressing the **OK** button again will tune to that program.

If the program is scheduled at a later time pressing the **OK** button will display the following screen. From this screen you can select what you would like to do with the program. Scroll to the option that you would like to use by pressing the **UP** or **Down Arrow** buttons then press the **OK** button. Press the **Exit** button on the Entone remote to leave the guide.

## Step 2

The Record Program option is only available with DVR. If the program is a series the **Record Series** option will also be displayed on this screen.

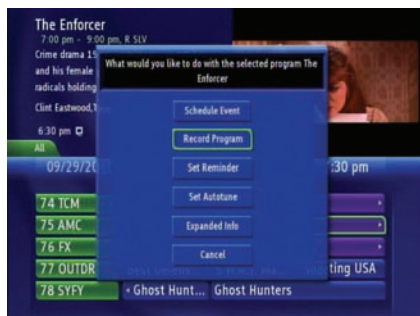

# ELECTRONIC PROGRAM GUIDE CONTINUED...

Press the **Menu** button on the Entone Remote. The Menu will open as shown below. To open a Menu option scroll to that option using the **Up** or **Down Arrow** buttons and press the **OK** button on the Entone remote.

**Guide** will display the program guide.

**DVR** will display recorded programs, programs scheduled to record, and other DVR functions. (will only show if DVR is part of service)

**My Library** will display Caller ID, video, PPV event pay per block, reminders and message menus.

**Control On** lets you temporarily disable parental controls. This option only displays in the menu if you have parental controls set.

**Settings** will allow access to enable Caller ID, block channels, and set up parental controls.

**Favorites** gives you the option to chose, edit, create or delete favorites.

**Search** will allow you to search the guide and recordings for a program or movie by title.



## Program Guide Icons



Indicates New Program



Indicates that Program is in HD Format



Scheduled to Record



Series Recording



Reminder



Autotune




Purple Background Indicates Movie

# ENABLE CALLER ID




Open the menu by pressing **Menu** on the Entone remote. The following screen will display.

**Step 1**

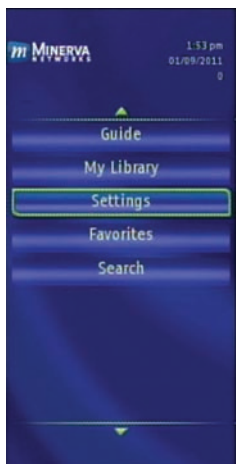


Scroll to the Settings option by pressing the **Up** or **Down Arrow** buttons on the Entone remote. Once you have selected **Settings**, press the **OK** button on the Entone remote. The following screen will be displayed.

**Step 2**

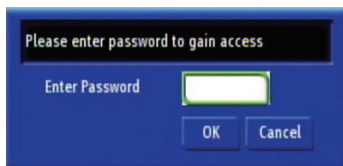


Press **"0"** on the number pad and then press **OK** on the Entone remote. The following screen will be displayed. ("0" is the default password.)

**Step 3**

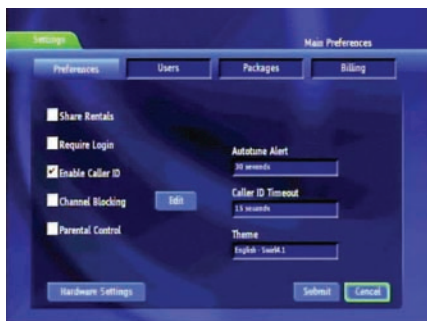

Scroll down to Enable Caller ID by using the **Down Arrow** button on the Entone remote, then press **OK** on the remote. There should now be a check mark beside Enable Caller ID. Now you will need to scroll over and down to Submit and then press **OK** on the Entone remote. The following screen will be displayed.

**Step 4**

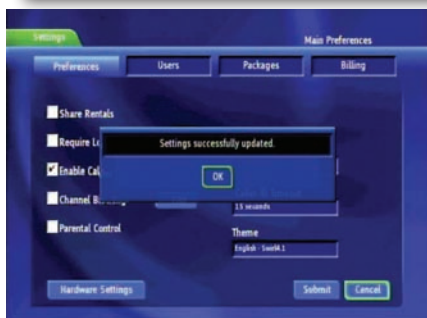


**Step 5**

Press **OK** on the Entone remote to complete the settings update.

## CALLER ID LOG

Press the **Phone** button at the bottom of the Entone remote.  
The screen below will display.

Step 1

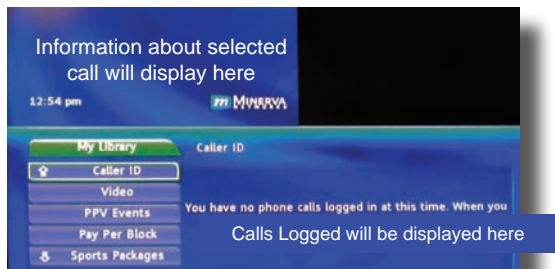

Step 2

Scroll to the right then scroll down using the **Up/Down Arrow** button, on the Entone remote to display information for a specific phone number.

Press **Exit** on the remote to return to television programming.


Step 3

## SET CALLER ID TIMEOUT

(This is the length of time that the calling number displays on the screen)


Open the menu by pressing **Menu** on the Entone remote.  
The following screen will display.

Step 1

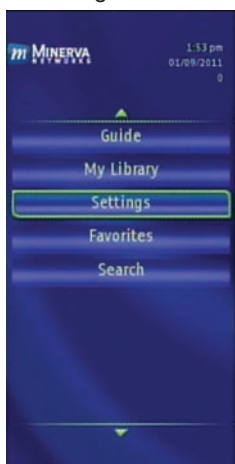

Scroll to the **Settings** option by pressing the **Up** or **Down Arrow** buttons. Once you have selected **Settings** press **OK** on the Entone remote. The following screen will display.


Step 2

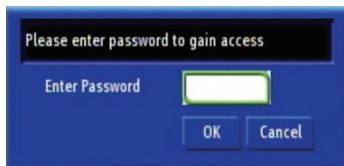



Press “0” on the number pad and then press **OK** on the Entone remote. The following screen will be displayed. (“0” is the default password.)

**Step 3**

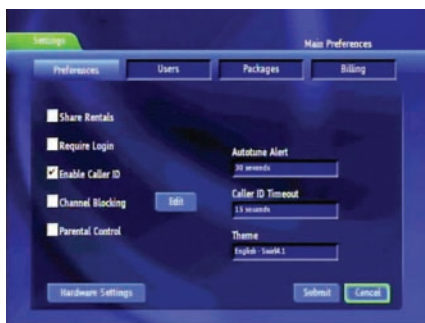


Scroll to **Caller ID Timeout** by using the **Arrow** buttons on the Entone remote, then press **OK**. You should now have an arrow on each side of Caller ID Timeout, as shown below.

**Step 4**



You can now adjust the amount of time that the **Caller ID** displays on the screen by pressing the **Right** or **Left Arrow** buttons on the Entone remote. After adjusting Timeout, press **OK** on the Entone remote. Now you will need to scroll down to Submit and then press **OK**. The following screen will display.

**Step 5**

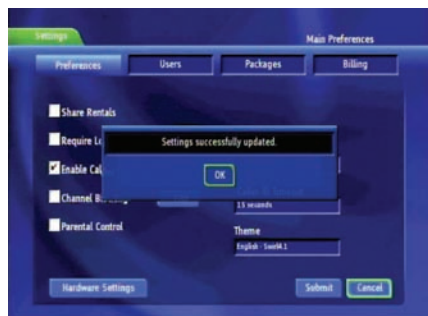

**Step 6**

Press **OK** on the Entone remote to complete the settings update.




## DVR (DIGITAL VIDEO RECORDER) OPTIONAL FEATURE

The DVR allows you to record regular scheduled programming as well as schedule recordings while absent from your TV & STB.

### How to record a program that is in progress...

Press the **Record** button on the Entone remote control. The program information will display at the bottom of the screen. A red dot will display beside **Live TV** to the right of this screen indicating that the program is being recorded, as shown in screen below.

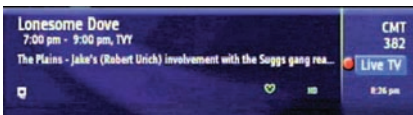


Step 1

To stop recording program press the **OK** button on the Entone remote. The screen to the right will display. Scroll to stop recording, then press **OK** on the Entone remote.



Another screen will display asking if you would like to stop recording. Select **Yes** and press the **OK** button on the Entone remote. The recording will be cancelled.

Step 3

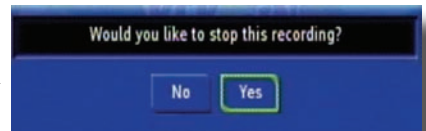

### How to record a future program using your DVR...


Open the on-screen program guide by pressing the **Guide** button on the Entone remote. Locate the program you would like to record by scrolling through the on-screen guide using the **Directional Arrow** buttons on the Entone remote. Once the program you want to record is located press the **Record** button on your Entone remote. The program will begin and stop recording at the times shown on the on-screen guide. A red dot will appear beside the program indicating that the program is scheduled to record.

Step 1




Press **Exit** on the Entone remote to leave the on-screen guide. To edit or cancel the scheduled recording press **OK**. The following screen will be displayed.

Step 2

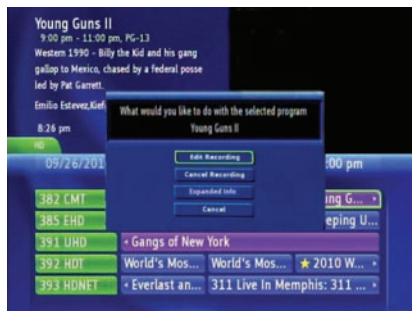

To cancel the recording scroll down to **Cancel Recording** using the arrow keys on the remote. Press **OK** or the **Stop** button and the recording will be cancelled. To edit the recording select **Edit Recording** and press **OK** on the Entone remote. The following screen will be displayed.

Step 3

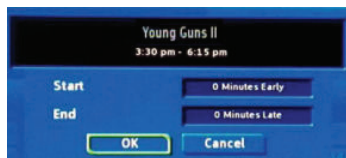

To start the recording before the scheduled time, increase the time in the box beside **Start**.

To change the start time scroll to the box beside **Start** using the **Up Arrow** button and press **OK**, then use the **Up** or **Down Arrow** buttons to increase or decrease the amount of time. Press **OK** after time has been adjusted.

To allow the program to continue to record after the scheduled time, increase the time in the box beside **End**.

After times have been adjusted scroll down to **OK** and press **OK** on the Entone remote to apply changes.

## How to schedule event...

Press the **Record-It** button on the Entone remote. The screen below will display.

Step 1



Scroll to **Schedule Event** by pressing the **Down Arrow** button on the Entone remote and press the **OK** button. The Schedule Event screen as shown here will be displayed. From this screen you can schedule a recording, reminder, or autotune. The frequency can be set to a single event, weekly, Monday through Friday or everyday. The date, start time and length of time can also be set. To change a field entry scroll to that field using the Directional arrow buttons on the Entone remote, and press the **OK** button. Now, the field entry can be changed by pressing the **Right** or **Left Arrow** button on the Entone remote. Once all field entries have been made scroll to OK and press the **OK** button on the Entone remote. Press the **Exit** button. The event is now scheduled.




**Step 2**


## How to Record a Series of Programs...

Series Recording allows you to record all available (including duplicate) episodes on a particular channel for different scheduled air-times and dates. The system recognizes the desired programming to be recorded by titles and will automatically adjust should the program change Date/Time on length of program.

Press the **Guide** button on the Entone remote. The following screen will display.

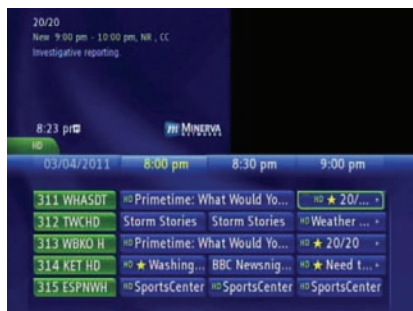

**Step 1**

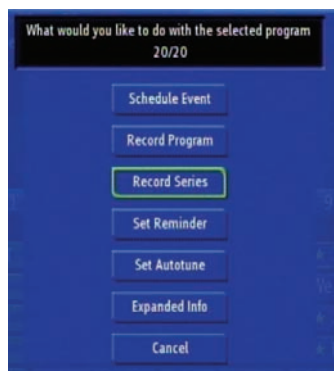


**Step 2**

Scroll to the series program you would like to record then press the **OK** button on the Entone remote. The following screen will be displayed.

A double red ball will be displayed beside the series to be recorded as shown in the following screen-shot. Press **Exit** on the Entone remote.


### Step 3

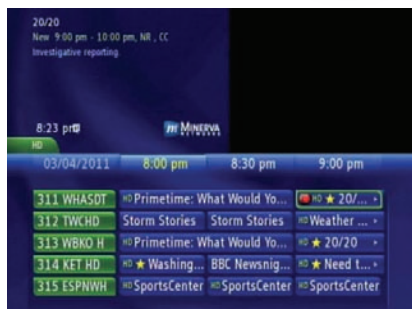

## How to Cancel a Series Recording...

Press the **Record It** button on the Entone remote, then scroll down to **Record**. Any programs that are scheduled to record will be listed at the right. Scroll to the program that you would like to edit and press the **OK** button on the Entone remote. The following screen will display.

### Step 1

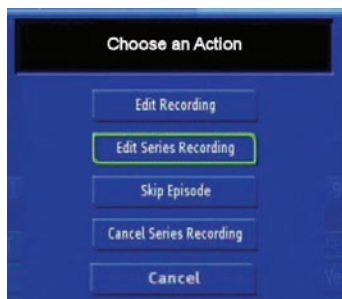

To cancel the series recording scroll to **Cancel Series Recording** and press **OK** on the Entone remote. A screen will display asking if you want to delete the series recording. Scroll to **Yes** and press the **OK** button on the Entone remote.

## How to Edit a Series Recording...

To edit the series recording scroll to **Edit Series Recording** and press **OK** on the Entone remote. The following screen will be displayed.

### Step 1

Scroll to the field that you would like to edit and press the **OK** button on the Entone remote. Press the **Up** or **Down Arrow** buttons on the Entone remote to change the entry in the field. After making changes press the **OK** button on the Entone remote. Scroll down to **OK** and press the **OK** button on the Entone remote again.



## How to playback a recorded program...

Press the **Record-It** button on the Entone remote. The following screen will display. Using the **Directional Arrow** buttons on the Entone remote, scroll to the program that you would like to play. Then press **OK** on the Entone remote.

Step 1




The following screen will display. Use the **Up** or **Down Arrow** Buttons on the Entone remote to scroll to **Play Recording**, then press **OK** on the Entone remote. The program will begin playback.

Step 2



Once playback has started you can fast forward, rewind, pause, and stop playback by pressing the buttons on the Entone remote as indicated below. Press **Fast Forward** or **Fast Reverse** up to four times to forward or reverse at increasing speeds (2x, 4x, 10x or 25x). Press **Play** to resume playback.

Step 3

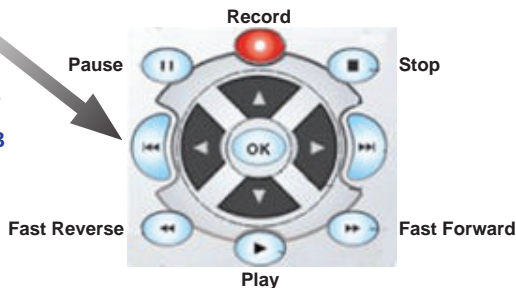


## PAUSE LIVE TV (PLT) OPTIONAL FEATURE



*Must have DVR service to use this feature. (part of DVR service)*


The PLT feature will allow you to pause, rewind, fast forward and playback the program that is in progress. Pressing the **Pause** button on the Entone remote will pause the program. To resume play, press either the **Pause** button again or the **Play** button. To rewind the program press the **Fast Reverse** button on the Entone remote. To resume play press the **Play** button on the Entone remote. When using this feature the **Time Bar** as shown to the right will display at the top of your screen. The green colored section indicates the time frame which can be navigated. Changing channels will cause a reset of time and will restart on new channel.
 
### Step 1



Pressing the **Fast Reverse** or **Fast Forward** button multiple times will advance speed up to 300x.


### Step 2

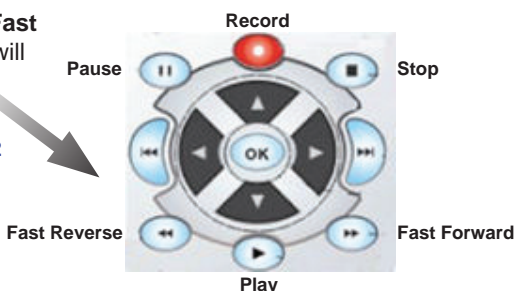

## SCHEDULE EVENT FROM PROGRAM GUIDE

Press the **Guide** button on the Entone remote, and the program guide will display as seen below. The last channel viewed will be displayed at the top left of the screen with information about the program on the right. The program listings are displayed at the bottom of the screen. To scroll through the program listings press the **Directional Arrow** buttons on the Entone remote. Info about the high-lighted program will be displayed at top left of screen. Scroll to a program that is scheduled at a later time and press the **OK** button. The options screen will be displayed. Scroll to **Schedule Event** then press the **OK** button on the Entone remote.


### Step 1

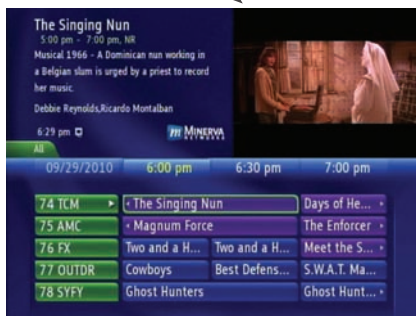

## SCHEDULE EVENT FROM PROGRAM GUIDE CONTINUED...

The following screen will display. From this screen you can schedule a **recording**, **reminder** or **autotune**. The frequency can be set to a single event, weekly, Monday through Friday or everyday. The date, start time, and length of time can also be set. To change a field entry, scroll to that field using the **Directional Arrow** buttons on the Entone remote, then press the **OK** button. After pressing the **OK** button the field entry can be changed by pressing the **Right** or **Left Arrow** button on the Entone remote. Once all field entries have been made, scroll to **OK** then press the **OK** button on the Entone remote. Press the **Exit** button. The event is now scheduled.

Step 2

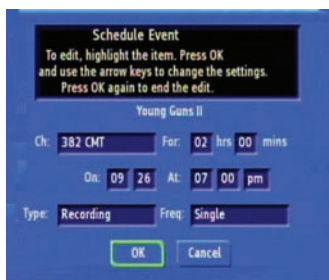


## SCHEDULED EVENTS

### How to Check & Cancel Scheduled Events...

Open the menu by pressing **Menu** on the Entone remote. The following screen will display. Scroll to **My Library** and press the **OK** button on the Entone Remote.


Step 1

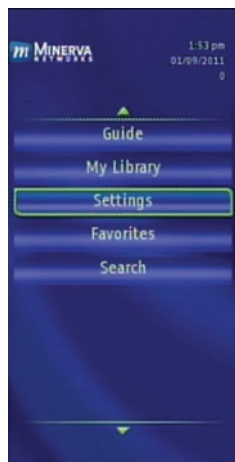




Scroll to **Reminders**: Any autotunes or reminders will be displayed on the right side of the screen as shown to the right. To cancel a reminder, scroll to the program using the **Directional Arrow** buttons and press the **OK** button on the Entone remote.

**Step 2**

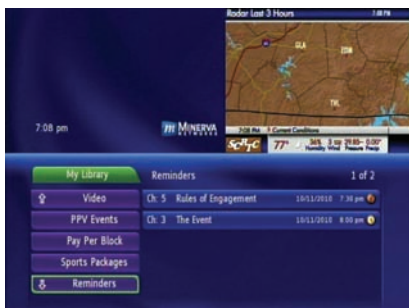

The following screen will be displayed. To remove the reminder press the **OK** button, then press **Exit** on the Entone remote.

**Step 3**

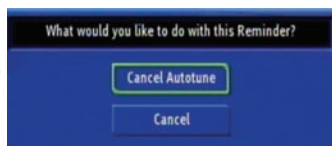


## PPV (PAY PER VIEW)


### How to Order a PPV Program...

To view PPV programs press and release the **Guide** button on the Entone remote until the PPV guide displays as shown here.

**Step 1**

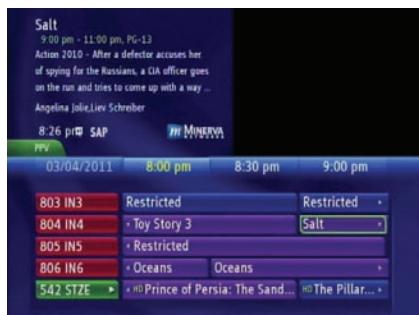


**Step 2**

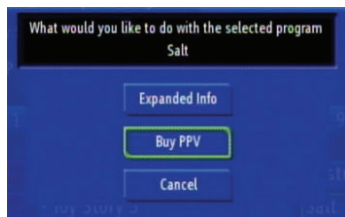

Scroll to the program that you would like to order using the **Directional Arrow** buttons on the Entone remote and press the **OK** button. The following screen will display.

## PPV (PAY PER VIEW) CONTINUED...

Scroll to **Buy PPV** then press the **OK** button and the following screen will display.

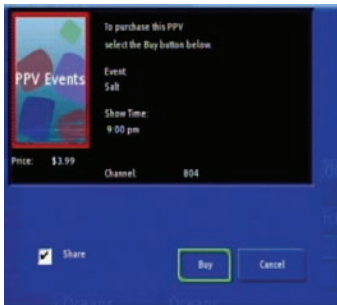

### Step 3

To order the program press the **OK** button on the Entone remote. To cancel order scroll to **Cancel** and press the **OK** button on the Entone remote. If you have set up a PIN you will need to enter the PIN before you will be able to purchase a program. (See page 24 on how to set up a PIN.)


All day movie ticket channels 805 and 806 programs can be purchased at any time; all other channel purchases must be made before the program starts.

Channels 805/806 are not cancelable.

### How to cancel a PPV Program...

Scroll to the **PPV** program in the program guide and press the **OK** button on the Entone remote. The following screen will display.

### Step 1

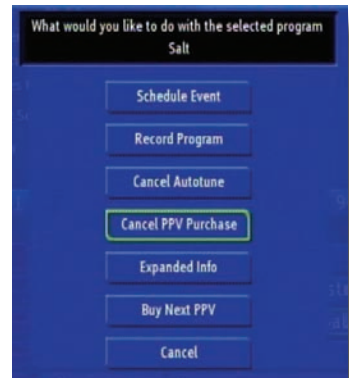


Scroll to **Cancel PPV Purchase** and press the **OK** button on the Entone remote.

Purchase cannot be cancelled after program is in progress.

## How to Create Favorites...


Press the **Menu** button on the Entone remote. The following screen will display. Using the **Directional Arrow** buttons on the remote, scroll to Favorites.

Step 1

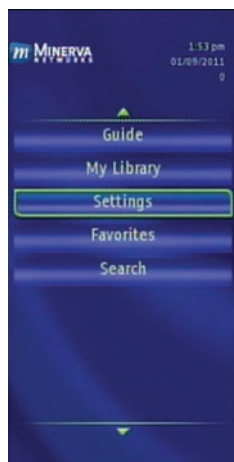


Press the **OK** button on the Entone remote. The screen below will be displayed. Scroll to **Create** then press **OK**.

Step 2

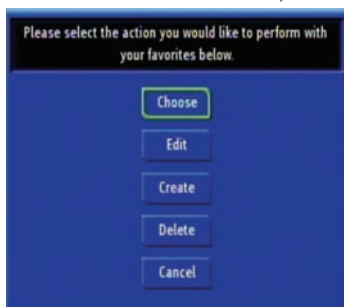

The following screen will be displayed. **Favorites1** is automatically created at this time. To add channels to **Favorites1** scroll to a channel that you would like to add using the **Directional Arrow** buttons and press **OK** on the remote, a favorites icon will be displayed beside the channel. To add other channels, scroll to a channel and press **OK** on the remote. When finished adding channels scroll to **Update** using the **Directional Arrow** buttons and press **OK** on the remote. Additional favorites can be created using this same procedure.

Step 3

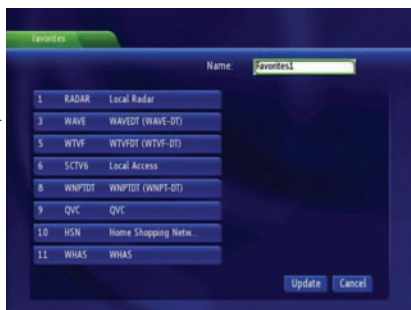


# CREATE & EDIT FAVORITES CONTINUED...

## How to Edit Favorites...


Press the **Menu** button on the Entone remote. The following screen will display. Using the **Directional Arrow** buttons on the remote, scroll to **Favorites**.


Step 1

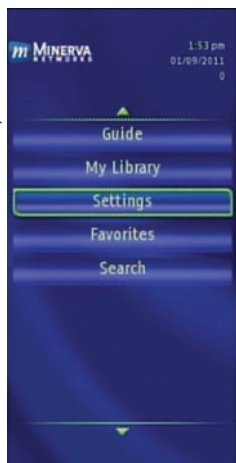


Press the **OK** button on the Entone remote. The screen below will be displayed. Scroll to **Edit** and press **OK**.

Step 2

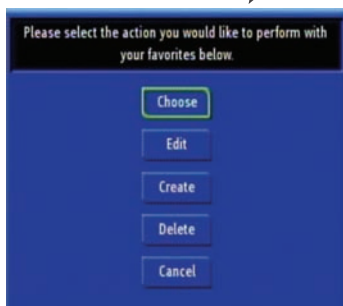

The following screen will be displayed. To add or remove channels, scroll to the channel that you would like to add or remove using the **Directional Arrow** buttons and press **OK** on the remote. A favorites icon  will be added or removed beside the channel. When finished adding channels, scroll to **Update** using the **Directional Arrow** buttons and press **OK** on the remote.

Step 3

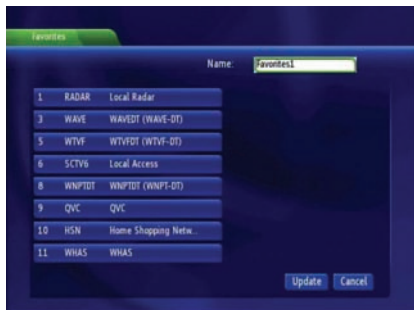



# SEARCH FEATURE



Press the **Menu** button on the Entone remote. The following screen will display. To use the search feature scroll to **Search** using the **Up** or **Down Arrow** button on the Entone remote. Then press the **OK** button on the remote.


Step 1

The screen below should display.

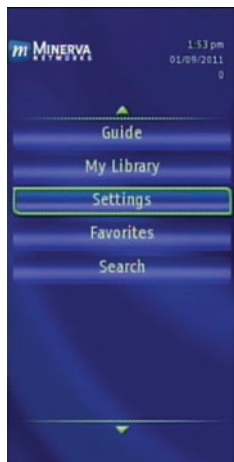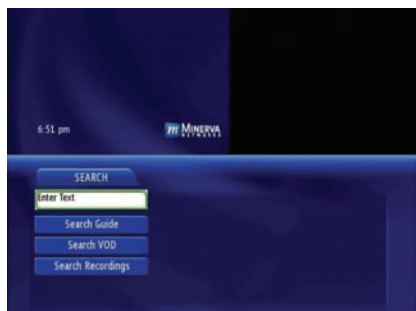

Press the **OK** button again to display the keypad as shown in this screen. Using the keypad enter the text that you would like to search for. Use the **Directional Arrow** buttons on the Entone remote to scroll to a key on the keypad and press the **OK** button on remote. After all entries have been made in the text box press **Exit** on the remote.

Step 2

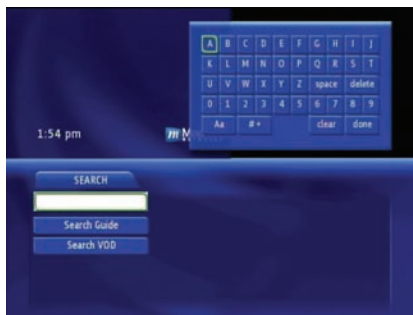

Now scroll to **Search Guide** or one of the other search options list. Press **OK** on the remote and any programs containing the text will be listed at the lower right of the screen as shown here. Scrolling to a program in the list displays the information for that program in the upper left section of the screen. If the program is in progress, pressing the **OK** button on the remote will tune to that program.

Step 3



## SEARCH FEATURE CONTINUED...

If the program is scheduled to air at a later time the screen to the right will be displayed. Select the action that you would like to take and press **OK** on the remote. The Record Program option is only available with DVR. The Record Series option will also be displayed, if the selected program is a series.

Step 4





## CLOSED CAPTIONING

Open the menu by pressing **Menu** on the Entone remote. The following screen should display.

Step 1

Scroll to the **Settings** option by pressing the **Up** or **Down Arrow** buttons on the Entone remote. Once you have selected **Settings** press the **OK** button on the Entone remote. The screen below will now be displayed.

Step 2

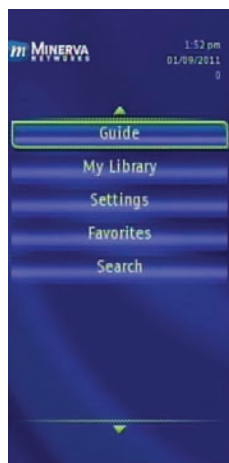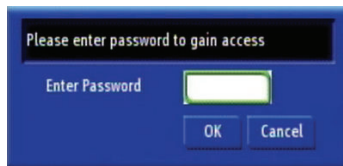

Press **"0"** on the number pad, then press **OK** on the Entone remote. The following screen will be displayed.

Step 3



Scroll to **Hardware Settings** at the bottom of the screen. Then press the **OK** button on the Entone remote. The following screen will be displayed.

## Step 4

entone USER MENU	
TV 1 Channel ID	10
TV 2 Channel ID	23
TV 3 Channel ID	39
Resolution	720P
Aspect Ratio	16:9 Wide
Closed Caption On	Off
Preferred Audio Lang	Default
AC3	Enable
Fan Speed	Low

Press Select and up/down to set TV 1 Channel ID

Scroll to **Closed Caption ON** and press the **OK** button on the Entone remote. Now press the **Up** or **Down Arrow** buttons to turn on Closed Captioning. If the TV is connected with component or HDMI cables, set Closed Captioning to **ON STB CC1**. If TV is connected with coaxial or composite cables, set Closed Captioning to **ON TV**. If the **ON TV** setting is used, the Closed Caption feature will also need to be enabled on the TV. Refer to your TV user manual to enable the Closed Captioning feature on the TV. After changing the Closed Caption On setting press the **OK** button on the Entone remote. Now scroll down using the **Down Arrow** button until you get to the **Submit** option as shown here.

## Step 5

entone USER MENU	
URC IR KeyCode	MAGNA VOX 10024-B
URC Key Delay Level	0
URC IR Command Sent To	Decoder 1
Harddisk information	Size: 146.7G Used: 6.7G
Format HardDisk	GO -
Video Position Adjustment	GO -
Advanced Setting	GO -
	<b>SUBMIT -</b>
	EXIT -

Select to submit the form

entone USER MENU	
URC IR KeyCode	MAGNA VOX 10024-B
URC Key Delay Level	0
URC IR Command Sent To	Decoder 1
Harddisk information	Size: 146.7G Used: 6.7G
Format HardDisk	GO -
Video Position Adjustment	GO -
Advanced Setting	GO -
	<b>SUBMIT -</b>
	EXIT -

Data is submitted and saved!

Press EXIT to close the message box

Now press the **OK** button on the Entone remote and the following screen will display.

## Step 5


Press the **OK** button again. Then scroll to **Exit** and press **OK**.



# ENABLE PARENTAL CONTROLS


Open the menu by pressing **Menu** on the Entone remote. The following screen will display. Scroll to the **Settings** option by pressing the **Up** or **Down Arrow** button on the Entone remote. Once you have selected **Settings**, press the **OK** button on the Entone remote.

Step 1

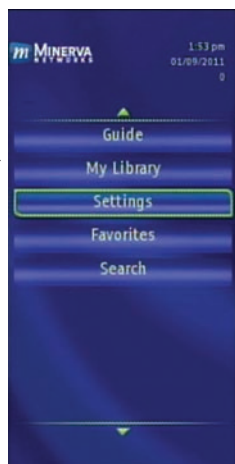

The following screen will be displayed. Press "**0**" on the number pad and then press **OK** on the Entone remote.

Step 2

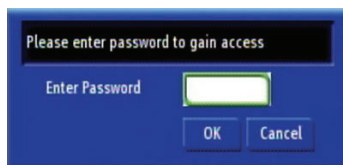


The following screen will be displayed. Scroll down to **Parental Control** by using the **Down Arrow** button on the Entone remote, then press **OK**. There will now be a check mark beside Parental Control. Scroll over and down to **Submit** and press **OK**.

Step 3



The following screen will display. Press **OK** on the Entone remote to complete the settings update.


Step 4

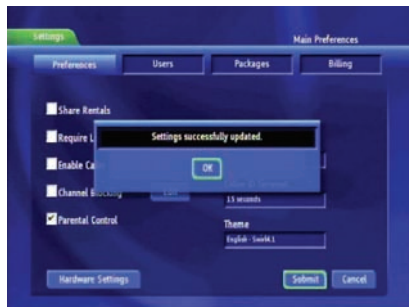

## How to Turn Parental Controls On & Off after it has been enabled...

Press the **Menu** button on the Entone remote. The following screen will display. To turn Parental Control off, scroll to **Control On** using the **Up** or **Down Arrow** button on the Entone remote, then press the **OK** button on remote. The Enter Password screen will display. **Enter Password** (default password is "0") using the Number buttons. Then press the **OK** button on the Entone remote. Parental Controls are now turned off. To turn Parental Controls back on press the **Menu** button on the Entone remote. Scroll to **Control Off** using the **Up** or **Down arrow** button on the Entone remote. Then press the **OK** button on remote. Parental Controls are now on.

Step 1

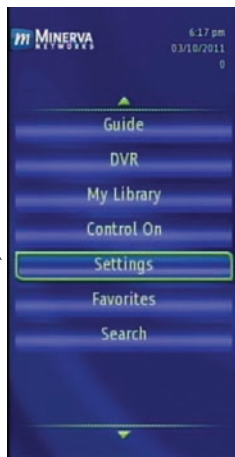

## How to Change Parental Control Password...


Press the **Menu** button on the Entone remote. The following screen will display. Scroll to **Settings** using the **Up** or **Down Arrow** button on the Entone remote. Press the **OK** button on the Entone remote and the Enter Password screen will display. **Enter Password** and press the **OK** button.

Step 1



The following screen will display. Scroll to **Users** by pressing the **Right** or **Left Arrow** button on the Entone remote. Press the **OK** button on the Entone remote.

Step 2

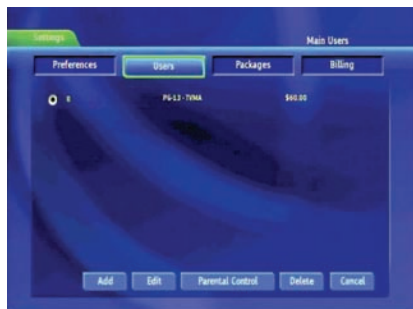


The following screen will display. Scroll down to **Edit** by using the **Directional Arrow** buttons on the Entone remote, then press the **OK** button on the remote.

Step 3

## EDIT PARENTAL CONTROLS CONTINUED...

Scroll to the box beside **Password** using the **Directional Arrow** buttons on the Entone remote. Press the **OK** button on the Entone remote. Using the Number buttons enter the current password (the default password is "0"). Press the **OK** button. Scroll down to the **New Password** box and press the **OK** button. Enter **New Password** and press the **OK** button again. Now scroll to **Confirm Password** and enter **New Password** again. Press the **OK** button.


The pin can be changed by using the same process that was used to change the password (the default pin is "0000"). When finished scroll to **Submit** and press the **OK** button on the Entone remote.

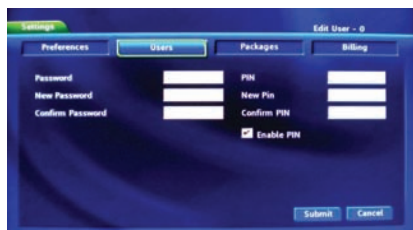

Step 4

The following screen will display. Press the **OK** button on the Entone remote. The new password has now been saved. Press the **Exit** button on the Entone remote to leave the screen, or scroll to **Parental Controls** to change the parental control ratings.


Step 5

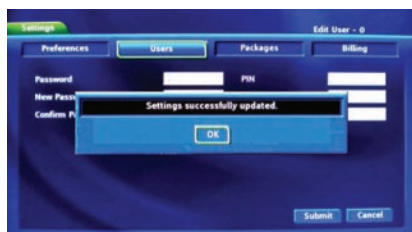

## How to Change Parental Control Ratings...

Press the **Menu** button on the Entone remote. The following screen will display. Scroll to **Settings** using the **Up** or **Down Arrow** button on the Entone remote. Press the **OK** button on the Entone remote. The **Enter Password** screen will display. Enter **Password** and press the **OK** button.

Step 1

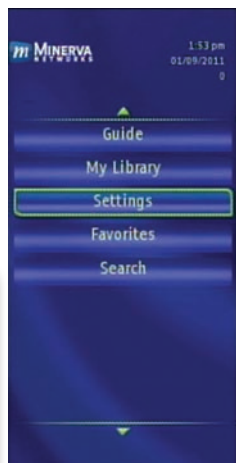


The following screen will display. Scroll to **Users** by pressing the **Right** or **Left Arrow** button on the Entone remote. Press the **OK** button on the Entone remote.

Step 2




The following screen will display. Scroll down to **Parental Control** by using the **Directional Arrow** buttons on the Entone remote, then press the **OK** button on the remote.

**Step 3**

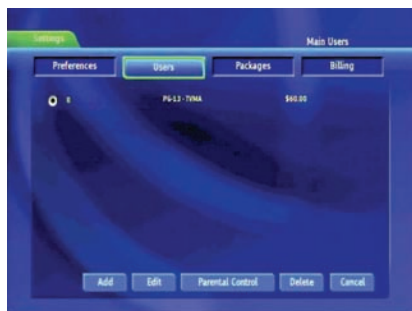


The screen to the right will be displayed. From this screen the ratings can be changed by scrolling to the option that you would like to change. When you have the option selected that you want to change press the **OK** button on the Entone remote. If it is a Movie or TV rating press the **Right** or **Left Arrow** button on the Entone remote to change. After all changes have been made scroll to **Submit** and press the **OK** button.

**Step 4**

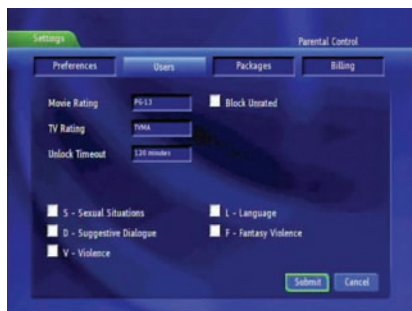

Press the **OK** button, then press the **Exit** button on the Entone remote to save changes and exit the **Settings** screen.


**Step 5**

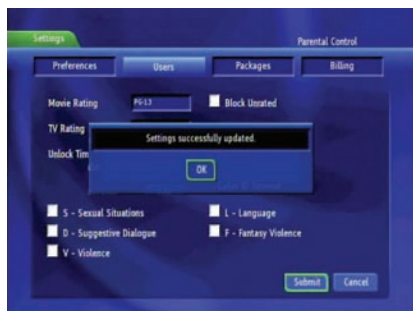


# CHANNEL BLOCKING

Open the menu by pressing **Menu** on the Entone remote. The following screen will display. Scroll to the **Settings** option by pressing the **Up** or **Down Arrow** buttons on the Entone remote. Once you have selected **Settings** press the **OK** button on the Entone remote. The following screen will display.

Step 1

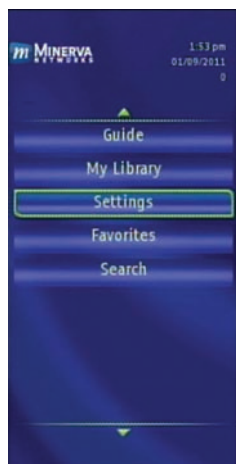


Step 2

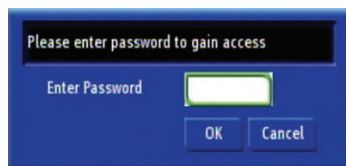

Press "0" on the number pad and press **OK** on the Entone remote.

The following screen will be displayed. Scroll down to **Channel Blocking** by using the **Down Arrow** button on the Entone remote, then press **OK**. There will now be a check mark beside **Channel Blocking**. Scroll to the right using the **Right Arrow** button on the Entone remote and select **Edit**, then press **OK**. The following screen will display. Press **OK** on the Entone remote.

Step 3

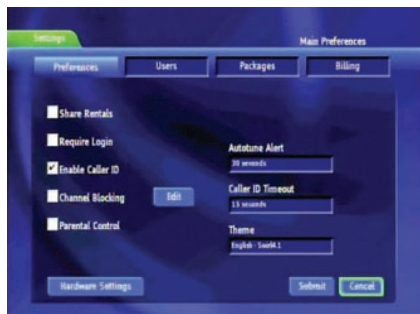


Step 4



The following screen will display. Press **OK** again on the Entone remote.

Step 5

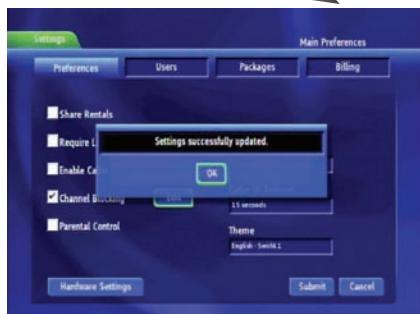

The following screen to the right will display. Now scroll down using the **Down Arrow** button on the remote and select a channel that you want to block. press **OK** after selecting a channel. After pressing OK, a circle with a line through it should display beside the blocked channel as seen in the following screen.

**Step 6**




Continue to select and block channels as needed. When finished blocking scroll to **Update** using the **Arrow** buttons and press the **OK** button on the remote. This will take you back to the **Settings** screen. Press **Exit** on the remote.

## THEMES


Open the menu by pressing **Menu** on the Entone remote. The following screen will display. Scroll to the **Settings** option by pressing the **Up** or **Down Arrow** buttons on the Entone remote. Once you have selected Settings press the **OK** button on the Entone remote.

**Step 1**

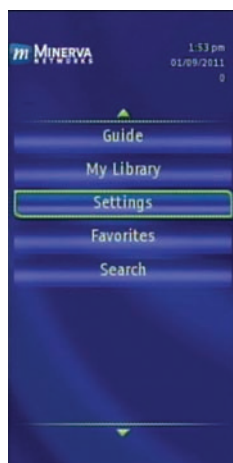

The following screen will be displayed. Press "0" on the number pad and then press **OK** on the Entone remote.

**Step 2**

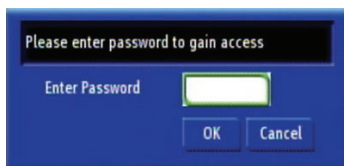




The following screen will be displayed. Scroll to the **Theme** field by using the **Arrow** buttons on the Entone remote, then press **OK** on the remote. To change between themes press the **Right** or **Left Arrow** button. After selecting the theme that you would like to use press the **OK** button on the Entone remote and scroll down to **Submit**.

Step 3



The following screen will be displayed. Press the **OK** button again. The new theme will be applied when the Entone STB reboots.

Step 4

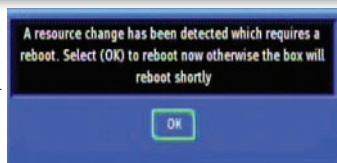

## PROGRAMMING REMOTE

### How to Program Remote to TV using Codes

1. Turn TV on.
2. Locate the code for your TV from the code list. (See pages 30-32)
3. Press and release the TV button on remote.
4. Press and hold the setup button on remote until the TV button flashes twice; release the setup button; the TV button will stay on.
5. Enter the four digit code for your TV.
6. Try turning off TV using the power button on the remote. If TV shuts off press the STB button on remote, if TV doesn't shut off repeat previous steps using a different code from list.
7. If your TV doesn't respond after trying all the codes for that brand, or your brand is not listed you can try programming using the auto-scan method.




## How to Program Remote to TV using Auto-Scan Method

1. Turn TV on.
2. Press TV button on remote.
3. Press and hold the setup button on remote until TV button blinks twice, release the setup button, the TV button will stay on.
4. Press the power button once.
5. Press the channel up or channel down button once. The TV button will start blinking.
6. Point the remote toward TV.
7. When the TV shuts off press the OK button to save code.
8. Press the STB button.

Note: If all codes are exhausted the TV button will blink rapidly 7 times and auto-scan will stop.

## How to Program Remote to Set Top Box (Hydra Only)


Press and hold the **OK** button on the front panel of the STB for 5 seconds. The front panel on the STB will now display "RC REG".

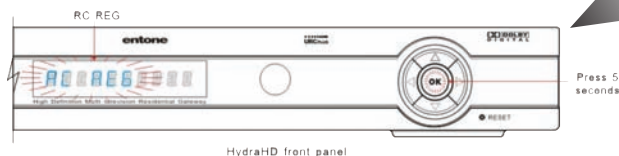

Step 1

Now press and hold the **STB** button on the Entone remote for 5 seconds. The STB button will now be illuminated.

Step 2

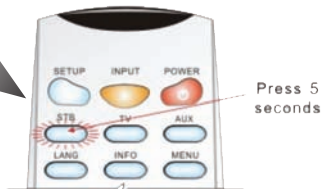


CONTINUED...


### Step 3



Remote control

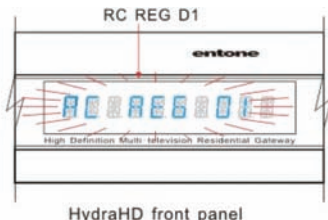

 The Amulet is another STB SCRTC offers for certain TV customers. The Amulet does not require the remote to be registered with the STB.



### (Hydra/Amulet): Entone Remote URC Plus TV Codes

Abex .....	0098
Admiral .....	0001 0099
Adventura .....	0100
Aiko.....	0015
Aiwa.....	0034
Akai.....	0002
Alleron .....	0044
Amtron .....	0036
Anam National .....	0003 0036
AOC .....	0004 0005 0053
Apex .....	0074 0111 0119
Audiovox .....	0036

Bell & Howell .....	0001 0045
Benq .....	0042
Bradford .....	0036
Broksonic .....	0114 0121
Candle .....	0004 0007 0100
Celebrity .....	0002
Citizen .....	0004 0007 0015 0036 0073 0097
Colortyme .....	0004
Concerto .....	0004
Contec/Cony .....	0011 0012 0036
Craig .....	0036

Crown .....	0036 0053	KTV.....	0036 0097
Curtis Mathes .....	0000 0004 0014	LG.....	0004 0005 0018
	0045 0073 0097	Loewe.....	0053
CXC .....	0036	Logik.....	0001
Daewoo .....	0004 0005 0013	Luxman.....	0004
	0015 0016 0097	LXI .....	0000 0004 0045
	0106		0053 0058 0068
Daytron .....	0004 0097		0075
Dell .....	0141 0142 0146	Magnavox.....	0004 0007 0018
Dimensia.....	0000		0053 0056 0057
Electroband .....	0002		0059 0060 0110
Electrohome .....	0002 0003 0004		0147
	0018 0021	Majestic .....	0001
Element .....	0004 0018	Marantz.....	0004 0051 0053
Emerson .....	0004 0011 0013	Megatron .....	0004 0051
	0024 0025 0031	Memorex.....	0001 0004 0005
	0033 0036 0044		0022 0045
	0045 0080 0097	MGA.....	0004 0005 0018
	0102 0107		0021 0047 0061
Envision.....	0004	Midland.....	0049 0068 0097
Fisher.....	0043 0045 0047		0098
	0103	Minutz.....	0048
Fujitsu .....	0044	Mitsubishi.....	0004 0005 0018
Funai.....	0036 0044		0021 0032 0047
Futuretech .....	0036		0061
GE .....	0000 0003 0004	Montgomery Ward .....	0001
	0008 0021 0048	Motorola.....	0003 0099
	0049 0063 0068	MTC.....	0004 0005 0073
	0070 0144	Multitech .....	0036
Goldstar.....	0004 0005 0011	NAD.....	0004 0058 0075
	0018 0050 0090		0085
	0091 0097 0098	NEC.....	0003 0004 0005
Grunpy.....	0036 0044	Nikko.....	0004 0015
Hallmark .....	0004	NTC.....	0015
Harvard.....	0036	Onwa .....	0036
Haier .....	0004	Optimus .....	0085
Hisense.....	0112	Optonica .....	0064 0099
Hitachi.....	0004 0011 0012	Orion.....	0023 0033 0107
	0030 0051 0084	Panasonic.....	0003 0049 0053
	0085 0086 0102		0096 0123 0140
	0133		0152
IMA .....	0036	Philips.....	0003 0007 0011
Infinity .....	0053		0017 0018 0053
Janeil .....	0100		0056 0057 0059
JBL .....	0053		0063 0095 0126
JC Penney.....	0000 0004 0005		0129 0148
	0007 0012 0021	Philips Magnavox ....	0148
	0048 0049 0058	Pilot.....	0097
	0063 0068 0072	Pioneer .....	0004 0085 0102
	0073 0075 0097	Portland .....	0004 0005 0015
	0098		0097
JCB.....	0002	Price Club.....	0073
Jensen.....	0004	Prima .....	0113
JVC.....	0011 0012 0026	Prism .....	0049
	0049 0054 0055	Proscan .....	0000 0008 0068
	0080 0117	Proton.....	0004 0011
Kawasho.....	0002 0004	Quasar.....	0003 0039 0049
Kenwood.....	0004 0018		0062 0069
Kloss Novabeam ..	0036 0056 0057	Radio Shack .....	0000 0045
	0100		

# PROGRAMMING REMOTE CONTINUED...

Radio Shack/Realistic...	0004	Supreme .....	0002
	0011 0036 0045	Sylvania .....	0004 0007 0018
	0064 0097 0098		0027 0053 0056
RCA .....	0000 0003 0004		0057 0059 0060
	0005 0008 0018		0124 0145 0150
	0028 0052 0065	Symphonic.....	0024 0031 0036
	0067 0068 0071		0105
	0076 0082 0102	Tandy .....	0099
	0104 0106 0108	Tatung.....	0003
	0115 0151		
Realistic .....	0000 0045	Technics.....	0049
Sampo .....	0004 0097 0098	Techwood .....	0004 0049
	0120	Teknika .....	0001 0004 0005
Samsung .....	0004 0005 0011		0007 0011 0012
	0014 0018 0019		0015 0036 0044
	0072 0073 0078		0060 0073 0096
	0094 097 0098		0097
Sansui.....	0023 0107 0122	TMK .....	0004
Sanyo .....	0045 0103	Toshiba .....	0006 0045 0058
Scotch.....	0004		0073 0075 0079
Scott .....	0004 0011 0033		0083 0087 0093
	0036 0044		0101
Sears .....	0000 0004 0012	Totevision.....	0097
	0018 0044 0045	Universal.....	0048 0063
	0047 0055 0058	Venturer .....	0018
	0068 0075 0103	Victor .....	0055
	0105	Vidtech.....	0004 0005
Sharp .....	0004 0009 0011	Viking.....	0100
	0025 0064 0077	Vizio .....	0004
	0092 0097 0099	Wards .....	0000 0001 0004
	0153		0005 0018 0031
Signature .....	0001		0044 0048 0053
Simpson.....	0007		0056 0057 0059
Sony .....	0002 0109		0060 0063 0064
Soundesign.....	0004 0007 0036	White Westinghouse ..	0013
	0044	Yamaha .....	0004 0005 0018
Squareview .....	0105	Zenith.....	0001 0081 0089
SSS .....	0036		0118 0125
Starlite .....	0036	Zen Zen .....	0146
Supre-Macy .....	0100		

## TROUBLESHOOTING

### Problem

No picture or getting no signal on TV

### Possible Solutions

Make sure TV is on the right channel or input. (stream 1 on channel 10 or one of the video inputs, stream 2 on channel 23 and stream 3 on channel 39)

Reboot the STB (to reboot unplug the power cord from the STB, leave unplugged for five seconds and plug back in)

Remote not changing channels

Press the STB button on remote

Make sure TV is on the right channel or input. (stream 1 on channel 10 or one of the video inputs, stream 2 on channel 23 and stream 3 on channel 39)

Program remote to STB (hydra only). See pages 29-30

Reboot the STB (to reboot unplug the power cord from the STB, leave unplugged for five seconds and plug back in)

Remote changes TV channel not the cable channel

Press the STB button on remote

Remote not controlling volume and power

Press the STB button on remote. Program remote to TV. See page 29

Skips channels when pressing the channel button

Set guide to All or Subscribed. See page 3

Caller ID not displaying on TV screen

Enable Caller ID. See page 5

Caller ID displays then goes off immediately

Increase Caller ID Timeout. See pages 6-7

Channel doesn't display in program guide

Set guide to All or Subscribed. See page 3

Unblock channel. See pages 26-27

Program guide displays restricted

Change Parental Control setting. See pages 23-25

This channel is currently playing restricted content displays across screen

Change Parental Control setting. See pages 23-25

Video signal blocked displays on screen

No channel subscription:.Call 678-2111, 528-2361 or 407-5111 to add channel



Technical Assistance Center

678-2615

528-2615

407-2615

[support.scrtc.com](http://support.scrtc.com)

